

WHEEL BUGGIES

AW16-B



PARTS & DECALS MANUAL

Manual Part #: 068517P | Revision: B
Language: English | Original Instructions



Wheel Buggy

PARTS & DECALS MANUAL

This manual covers the products listed below:

<u>Part No.</u>	<u>Description</u>
073000	AW16-B, All Electric Wheel Buggy, Poly-Bucket, Foam Filled Tires

For information regarding the following, please see “AW16-B Safety & Operations Manual”

- Warranty Information
- Dealer Information
- How to Identify the Model / Serial Numbers on the Machine
- Technical Specifications

Table of Contents

Sect No.	Title	Page
1	PARTS.....	4
	Factory Service Information.....	5
	Replacement Parts Procedure	5
	General Arrangement	6
	General Arrangement Continued.....	8
	General Arrangement Parts List.....	9
	Control Cabinet Assembly.....	10
	Control Cabinet Assembly Parts List	11
	Control Cabinet Assembly Continued	12
	Bucket Assembly	14
	Chassis Assembly	16
	Chassis Assembly Parts List.....	17
	Chassis Assembly Continued.....	18
	Transaxle and Motor.....	20
	Battery Slide Assembly.....	22
	Battery Slide Assembly and Parts List.....	23
	Handle Bar & Throttle	24
	Handle Bar & Throttle Parts List	25
	Steering Column Assembly.....	26
	Steering Column Assembly Parts List	27
	Wheel Assemblies.....	28
	Wheel Assemblies Contined	29
	Hydraulic System	30
	Hydraulics System Parts List.....	31
2	Decals	32
	Decals, AW16-B	34
	Revision Details	36

**Section 1
PARTS**

Factory Service Information

Replacement Parts Procedure

SECTION 1

PARTS

We recommend AEC quality replacement parts, available from the AEC Customer Service Department or your nearest AEC Dealer.

Part numbers are subject to change without notice. Part numbers might be different outside of the United States of America. Use part numbers listed in the applicable parts list table when you place your order. If a part number changes, the AEC Customer Service Department or your nearest AEC dealer will have the latest part number for the replacement part.

Remember when you order replacement parts, you will need your model number and serial number. These are the numbers that you have recorded in the UNIT ID section of the safety and operations manual. Please order replacement parts by the appropriate part number, not the key number.

This manual contains an illustrated parts list for help in ordering replacement parts for your machine. Follow the instructions below when ordering parts to insure prompt and accurate delivery:

1. All orders for service parts - include the serial number for the machine. Shipment will be delayed if this information is not available.
2. Include correct description and part number from the "PARTS" Section 1.
3. Specify exact shipping instructions, including the preferred routing and complete destination address.
4. **DO NOT** return parts to AEC without receiving written authorization from AEC. All authorized returns must be shipped pre-paid.
5. When placing an order, please contact the AEC Dealer nearest you.



All information, specifications, and illustrations in this manual are subject to change without notice and are based on the latest information at the time of publication.



All set screws have blue (LOC-TITE™) applied at the factory. If a set screw is removed or loosened for any reason re-apply blue (LOC-TITE™)



All grease fittings are capped with CAP PLUG GC-5 (AEC PN 015692) to protect the fitting. If the cap is missing or damaged replace it as soon as possible.

**SECTION 1
PARTS**

General Arrangement




ITEM	PART #	DESCRIPTION	QTY
1	073015	ASSEMBLY, AW16-B CONTROL CABINET	1
2	073077	ASSEMBLY, BUCKET 16 FT ³	1
3	073129	ASSEMBLY, AW16-B CHASSIS	1


PAGE LEFT BLANK INTENTIONALLY

SECTION 1 PARTS


General Arrangement Continued

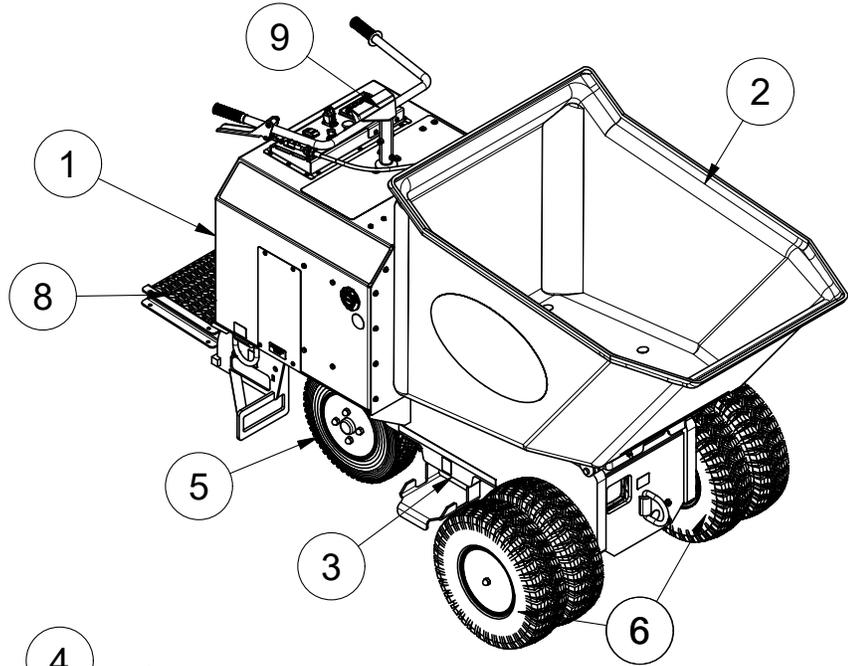

RIGHT SIDE

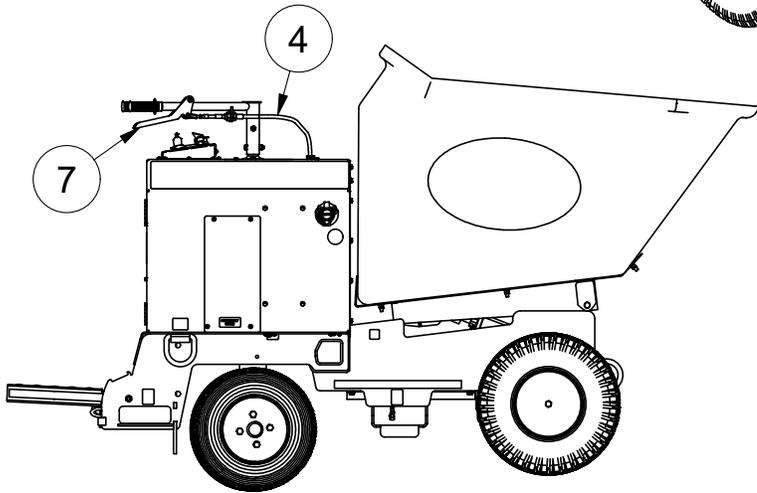

LEFT SIDE

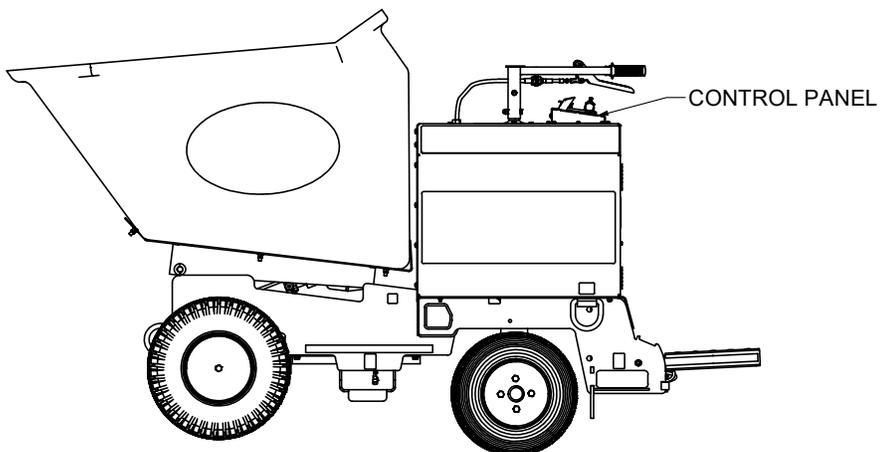


General Arrangement Parts List

SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	073002	WELDMENT, CABINET	1
2	073077	ASSEMBLY, BUCKET 16 FT ³	1
3	073020	WELDMENT, BUGGY CHASSIS	1
4	073037	THROTTLE CABLE	1
5	073045	ASSEMBLY, STEERING COLUMN AND TIRE	1
6	073073	ASSEMBLY, FRONT / DRIVE WHEEL	2
7	42107-25	THROTTLE CONTROL LEVER	1
8	42115-01	OPERATOR PLATFORM	1
9	42126-01	HANDLEBAR	1

SECTION 1 PARTS

Control Cabinet Assembly

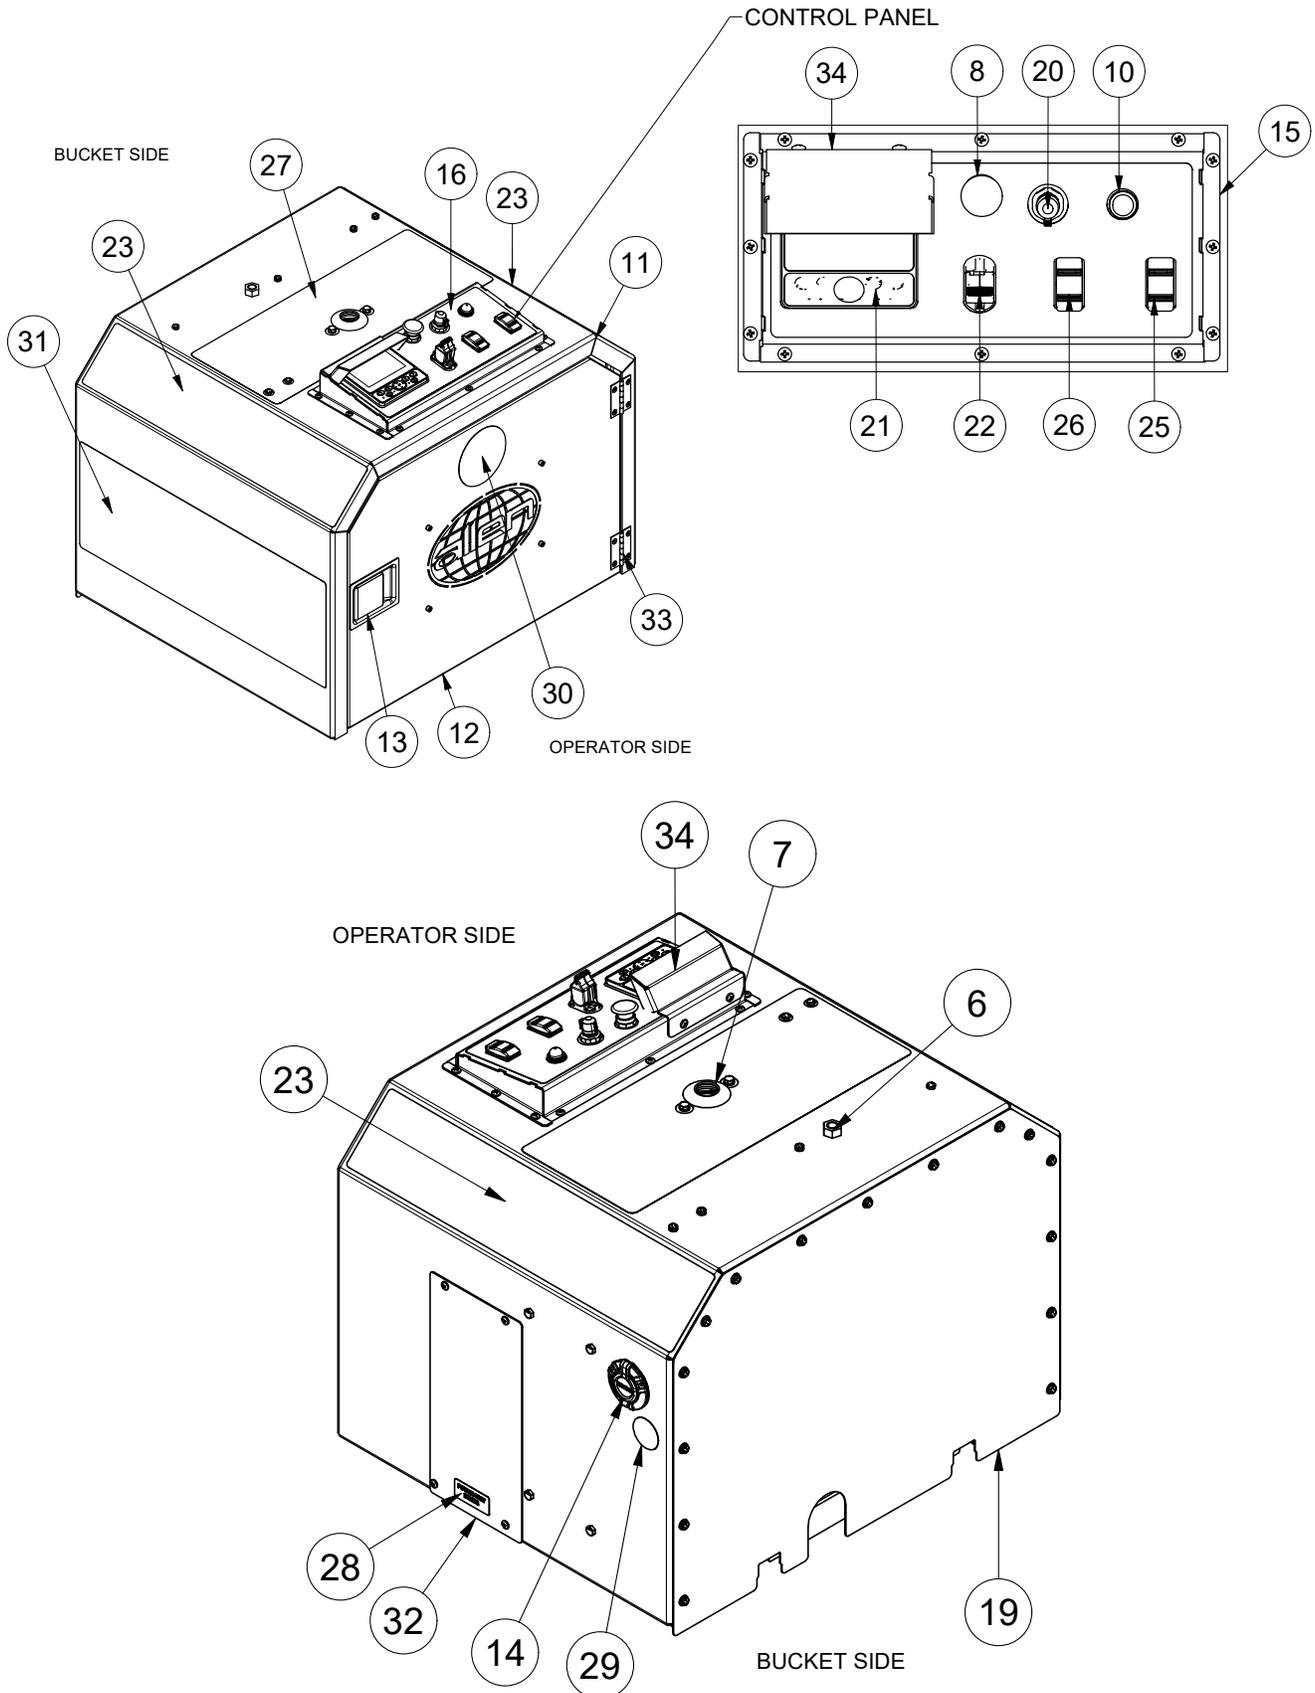

Control Cabinet Assembly Parts List


SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	010052	FASTENER, HHCS 5/16" X 5/8"	2
2	010090	FASTENER, LOCK WASHER 5/16" GR8	2
3	012612	FASTENER, NUT HEX NYLOCK 5/16"-18	2
4	32100-8	FLANGED BEARING	1
5	32100-21	ISOLATOR, STUD MOUNTED RUBBER	2
6	42107-30	GRIP, METAL CORD 0.375" TO 0.450" OD	1
7	42126-09	WASHER, RUBBER	1
8	45043-04	PUSH BUTTON, E-STOP	1
9	066255	MANUAL TUBE	1
10	068956	SWITCH, HORN	1
11	073002	WELDMENT, CABINET	1
12	073003	WELDMENT, CABINET DOOR	1
13	073011	LATCH FOR CABINET DOOR	1
14	073012	CHARGING PORT	1
15	073018	WELDMENT, CONTROL PANEL	1
16	073023A	DECAL, CONTROL PANEL	1
17	073026	SENSOR, THROTTLE CONTROL	1
18	073027	BATTERY CHARGER	1
19	073033	REAR CABINET PANEL	1
20	073046	SWITCH, ROTARY ON/OFF	1
21	073079	DISPLAY, DM430	1
22	073080	SWITCH, BUCKET DUMP	1
23	073091	DECAL, SIDE AW16-B PANEL	2
24	073110	WELDMENT, THROTTLE CABLE BRACKET	1
25	073118	SWITCH, FWD N REV ROCKER SWITCH	1
26	073119	SWITCH, LED LIGHT ROCKER SWITCH	1
27	073125	DECAL, TOP AW16-B PANEL	1
28	073126	DECAL, POWER UNIT, ACCESS POINT	1
29	073127	DECAL, CHARGE PORT AW16-B	1
30	073534	DECAL, BATTERY POWERED	1
31	074116	DECAL, BATTERY POWERED SIDE PANEL	1
32	074942	PLATE, POWER UNIT COVER	1
33	074944	HINGE FOR CABINET DOOR	2
34	074957	SHIELD FOR DISPLAY	1

SECTION 1 PARTS

Control Cabinet Assembly Continued

UNDERSIDE

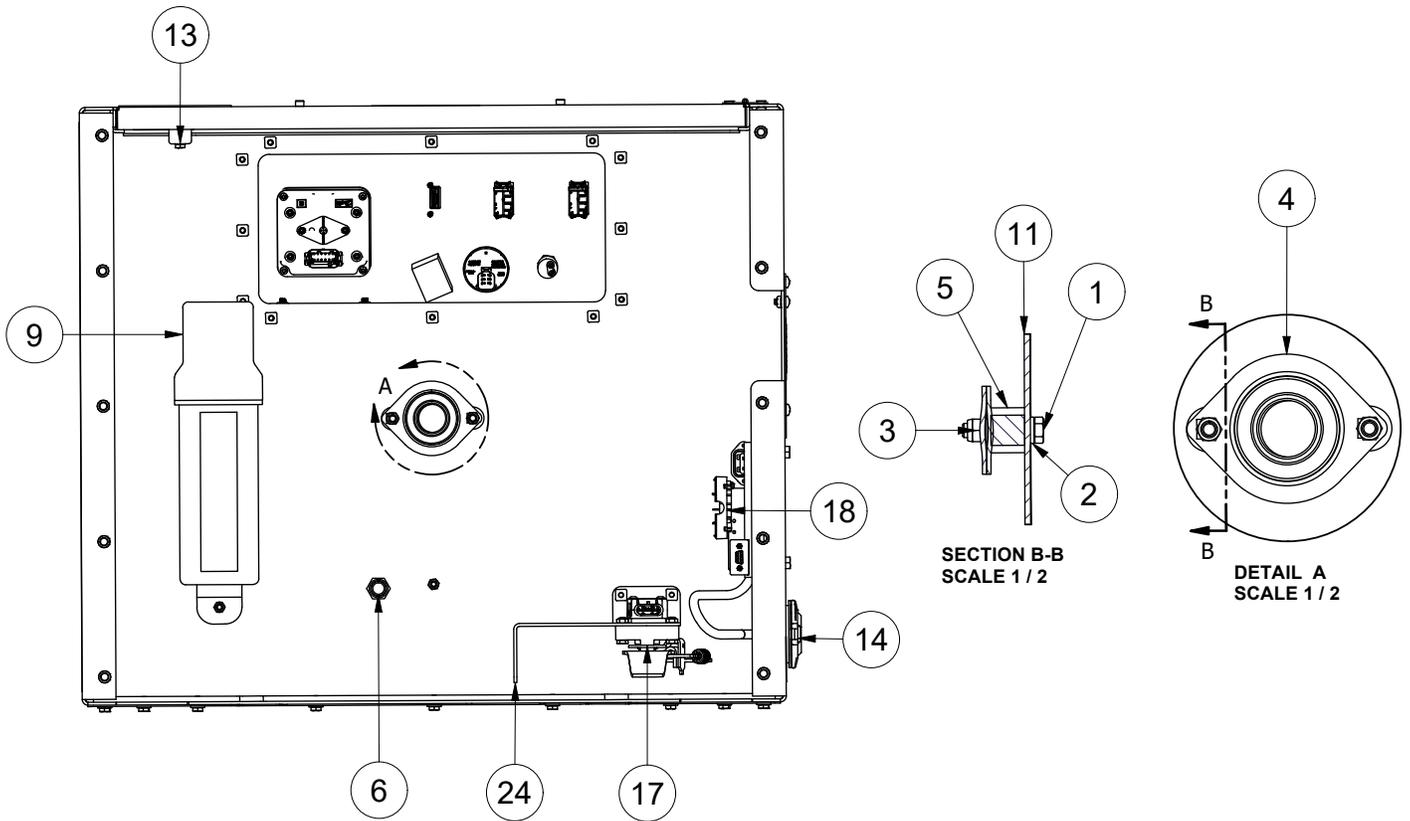


Control Cabinet Assembly Parts List

SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	010052	FASTENER, HHCS 5/16" X 5/8"	2
2	010090	FASTENER, LOCK WASHER 5/16" GR8	2
3	012612	FASTENER, NUT HEX NYLOCK 5/16"-18	2
4	32100-8	FLANGED BEARING	1
5	32100-21	ISOLATOR, STUD MOUNTED RUBBER	2
6	42107-30	GRIP, METAL CORD 0.375" TO 0.450" OD	1
7	42126-09	WASHER, RUBBER	1
8	45043-04	PUSH BUTTON, E-STOP	1
9	066255	MANUAL TUBE	1
10	068956	SWITCH, HORN	1
11	073002	WELDMENT, CABINET	1
12	073003	WELDMENT, CABINET DOOR	1
13	073011	LATCH FOR CABINET DOOR	1
14	073012	CHARGING PORT	1
15	073018	WELDMENT, CONTROL PANEL	1
16	073023A	DECAL, CONTROL PANEL	1
17	073026	SENSOR, THROTTLE CONTROL	1
18	073027	BATTERY CHARGER	1
19	073033	REAR CABINET PANEL	1
20	073046	SWITCH, ROTARY ON/OFF	1
21	073079	DISPLAY, DM430	1
22	073080	SWITCH, BUCKET DUMP	1
23	073091	DECAL, SIDE AW16-B PANEL	2
24	073110	WELDMENT, THROTTLE CABLE BRACKET	1
25	073118	SWITCH, FWD N REV ROCKER SWITCH	1
26	073119	SWITCH, LED LIGHT ROCKER SWITCH	1
27	073125	DECAL, TOP AW16-B PANEL	1
28	073126	DECAL, POWER UNIT, ACCESS POINT	1
29	073127	DECAL, CHARGE PORT AW16-B	1
30	073534	DECAL, BATTERY POWERED	1
31	074116	DECAL, BATTERY POWERED SIDE PANEL	1
32	074942	PLATE, POWER UNIT COVER	1
33	074944	HINGE FOR CABINET DOOR	2
34	074957	SHIELD FOR DISPLAY	1

SECTION 1 PARTS

Bucket Assembly

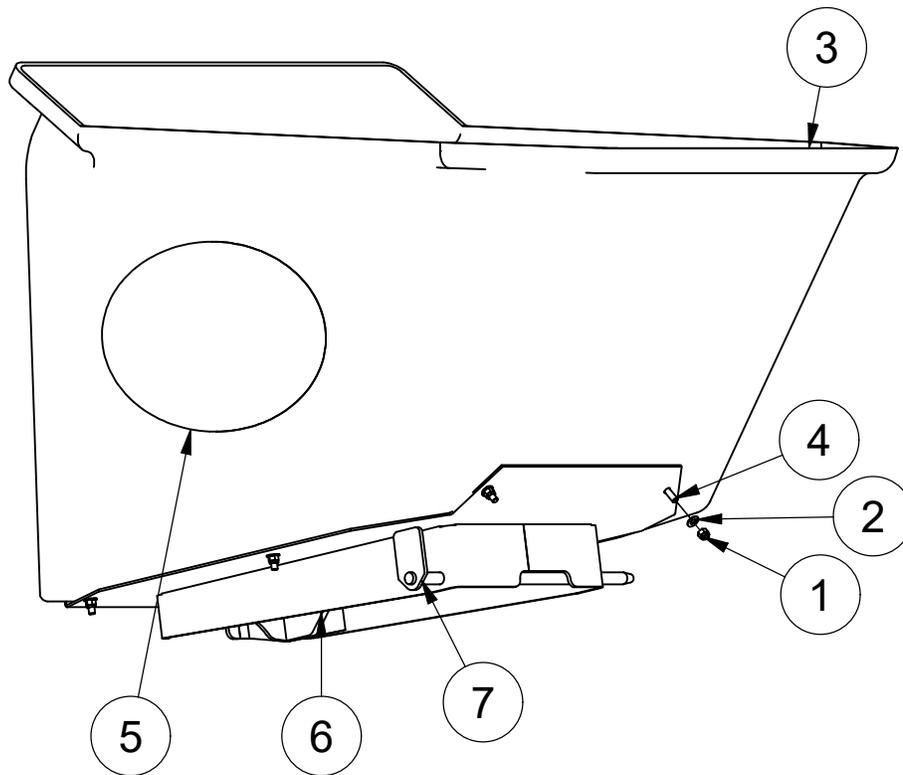


ITEM	PART #	DESCRIPTION	QTY
1	010464	FASTENER, NUT NYLOCK 3/8"-16 GRADE 8	6
2	017751	FASTENER, FLAT WASHER 3/8" GRADE 8	6
3	42106-01	BUCKET, POLYETHYLENE 16 FT ³	1
4	42106-02	BOLT, ELEVATOR 3/8"-16 X 1-1/2"	6
5	056400	DECAL, OVAL ALLEN 20"	2
6	073054	WELDMENT, BUCKET BASE	1
7	073076	WELDMENT, PIVOT PIN FOR BUCKET BASE	1

PAGE LEFT BLANK INTENTIONALLY

SECTION 1
PARTS

Chassis Assembly

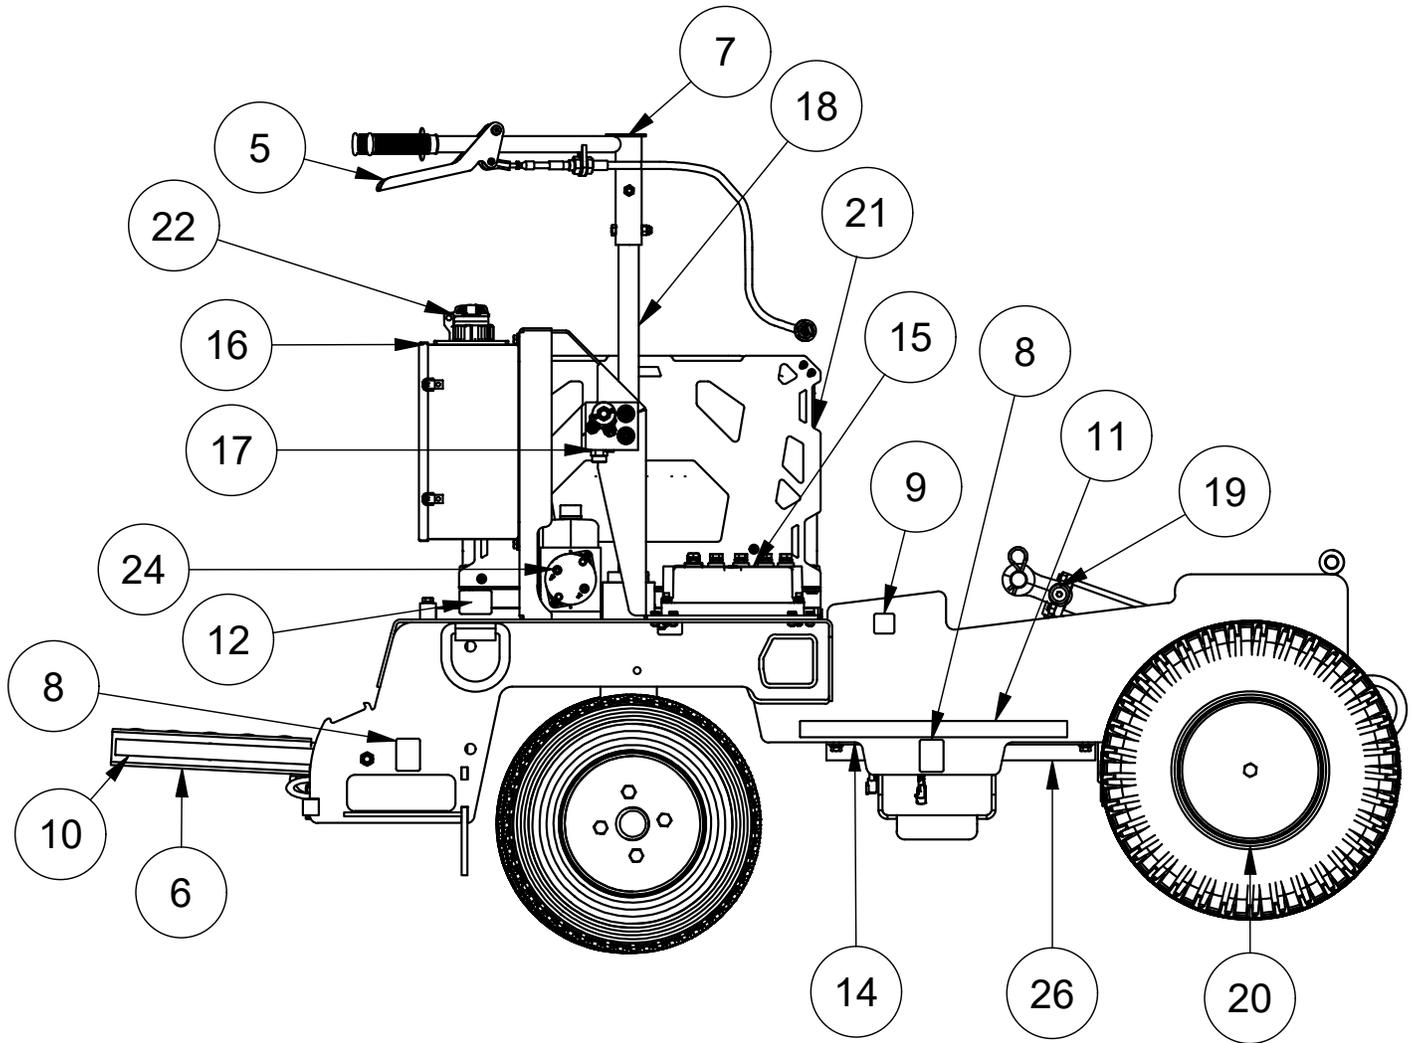



Chassis Assembly Parts List

SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	010040	FASTENER, HHCS 3/8"-16 X 2" GRADE 8	2
2	010069	FASTENER, HHCS 1/2"-13 X 1-1/2" GRADE 8	2
3	010464	FASTENER, NUT NYLOCK 3/8"-16 GRADE 8	2
4	011238	FASTENER, NUT HEX NYLOCK 1/2"-13	2
5	42107-25	LEVER, TRAVEL SPEED CONTROL	1
6	42115-01	OPERATOR PLATFORM	1
7	42126-01	HANDLE BAR	1
8	065653	DECAL, LIFT HOOK	4
9	065917	DECAL, PINCH POINT	2
10	066489	DECAL, CHECKER (13.55"X1")	2
11	066490	DECAL, CHECKER (16.625"X1")	2
12	068459	DECAL, TIE DOWN	3
13	069835	LIGHT, LED 1200 LUMENS 12 V(DC) 1.5 AMPS	1
14	073020	WELDMENT, BUGGY CHASSIS	1
15	073022	INVERTER	1
16	073029	ELECTRICAL ENCLOSURE	1
17	073044	BLOCK MANIFOLD	1
18	073045	ASSEMBLY, STEERING COLUMN AND WHEEL	1
19	073055	CYLINDER, 8" STROKE 2" BODY	1
20	073073	ASSEMBLY, FRONT WHEEL	2
21	073099	ASSEMBLY, BATTERY SLIDE	1
22	073104	SWITCH, BATTERY DISCONNECT	1
23	073106	FASTENER, M12 X 1-1/2" X 50mm LONG	2
24	073107	POWER UNIT, HYDRAULIC DUMP CYLINDER	1
25	074913	ISOLATOR FOR OPERATOR PLATFORM	2
26	074936	SKID PLATE	1

**SECTION 1
PARTS**

Chassis Assembly Continued

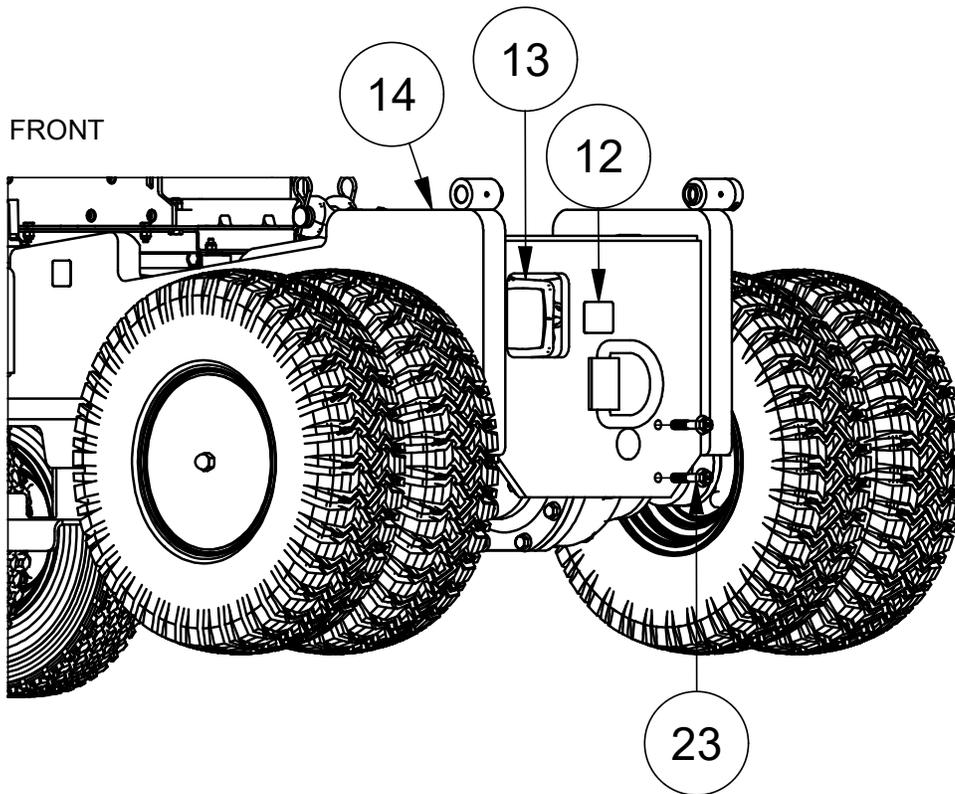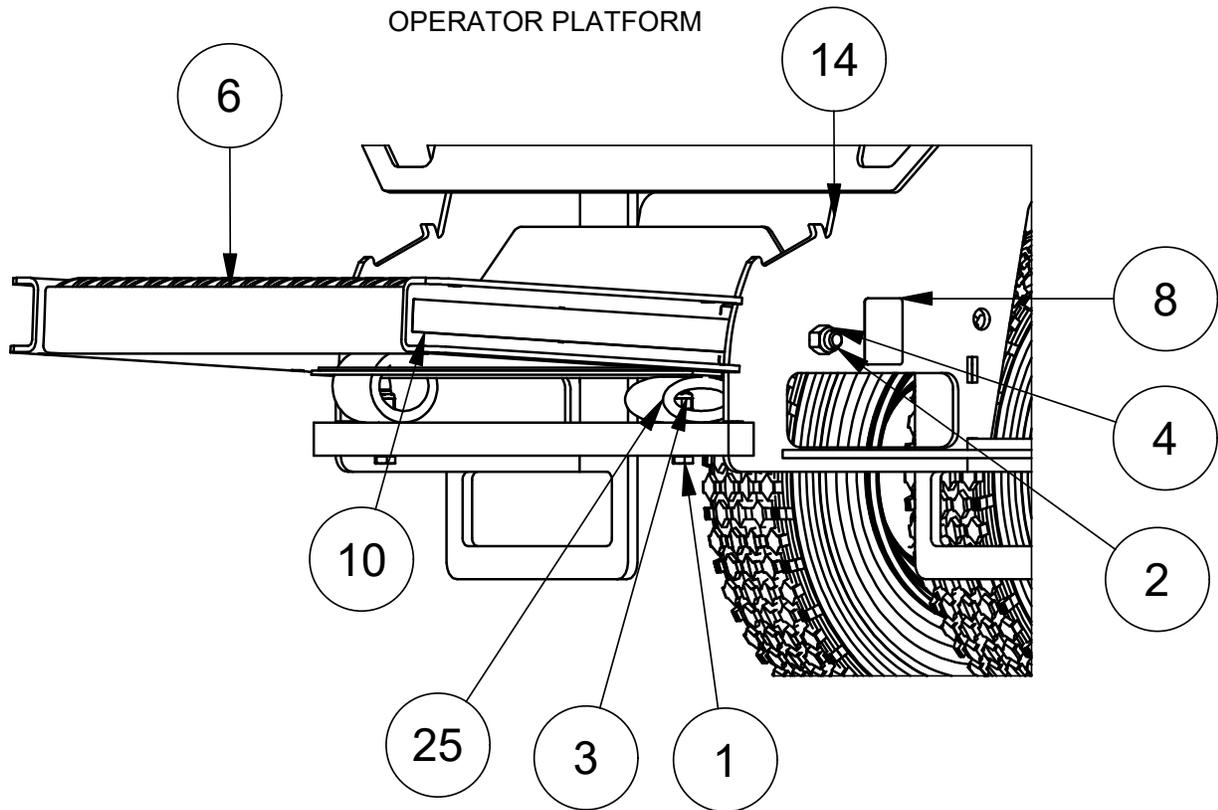


Chassis Assembly Parts List

SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	010040	FASTENER, HHCS 3/8"-16 X 2" GRADE 8	2
2	010069	FASTENER, HHCS 1/2"-13 X 1-1/2" GRADE 8	2
3	010464	FASTENER, NUT NYLOCK 3/8"-16 GRADE 8	2
4	011238	FASTENER, NUT HEX NYLOCK 1/2"-13	2
5	42107-25	LEVER, TRAVEL SPEED CONTROL	1
6	42115-01	OPERATOR PLATFORM	1
7	42126-01	HANDLE BAR	1
8	065653	DECAL, LIFT HOOK	4
9	065917	DECAL, PINCH POINT	2
10	066489	DECAL, CHECKER (13.55"X1")	2
11	066490	DECAL, CHECKER (16.625"X1")	2
12	068459	DECAL, TIE DOWN	3
13	069835	LIGHT, LED 1200 LUMENS 12 V(DC) 1.5 AMPS	1
14	073020	WELDMENT, BUGGY CHASSIS	1
15	073022	INVERTER	1
16	073029	ELECTRICAL ENCLOSURE	1
17	073044	BLOCK MANIFOLD	1
18	073045	ASSEMBLY, STEERING COLUMN AND WHEEL	1
19	073055	CYLINDER, 8" STROKE 2" BODY	1
20	073073	ASSEMBLY, FRONT WHEEL	2
21	073099	ASSEMBLY, BATTERY SLIDE	1
22	073104	SWITCH, BATTERY DISCONNECT	1
23	073106	FASTENER, M12 X 1-1/2" X 50mm LONG	2
24	073107	POWER UNIT, HYDRAULIC DUMP CYLINDER	1
25	074913	ISOLATOR FOR OPERATOR PLATFORM	2
26	074936	SKID PLATE	1

SECTION 1 PARTS

Transaxle and Motor


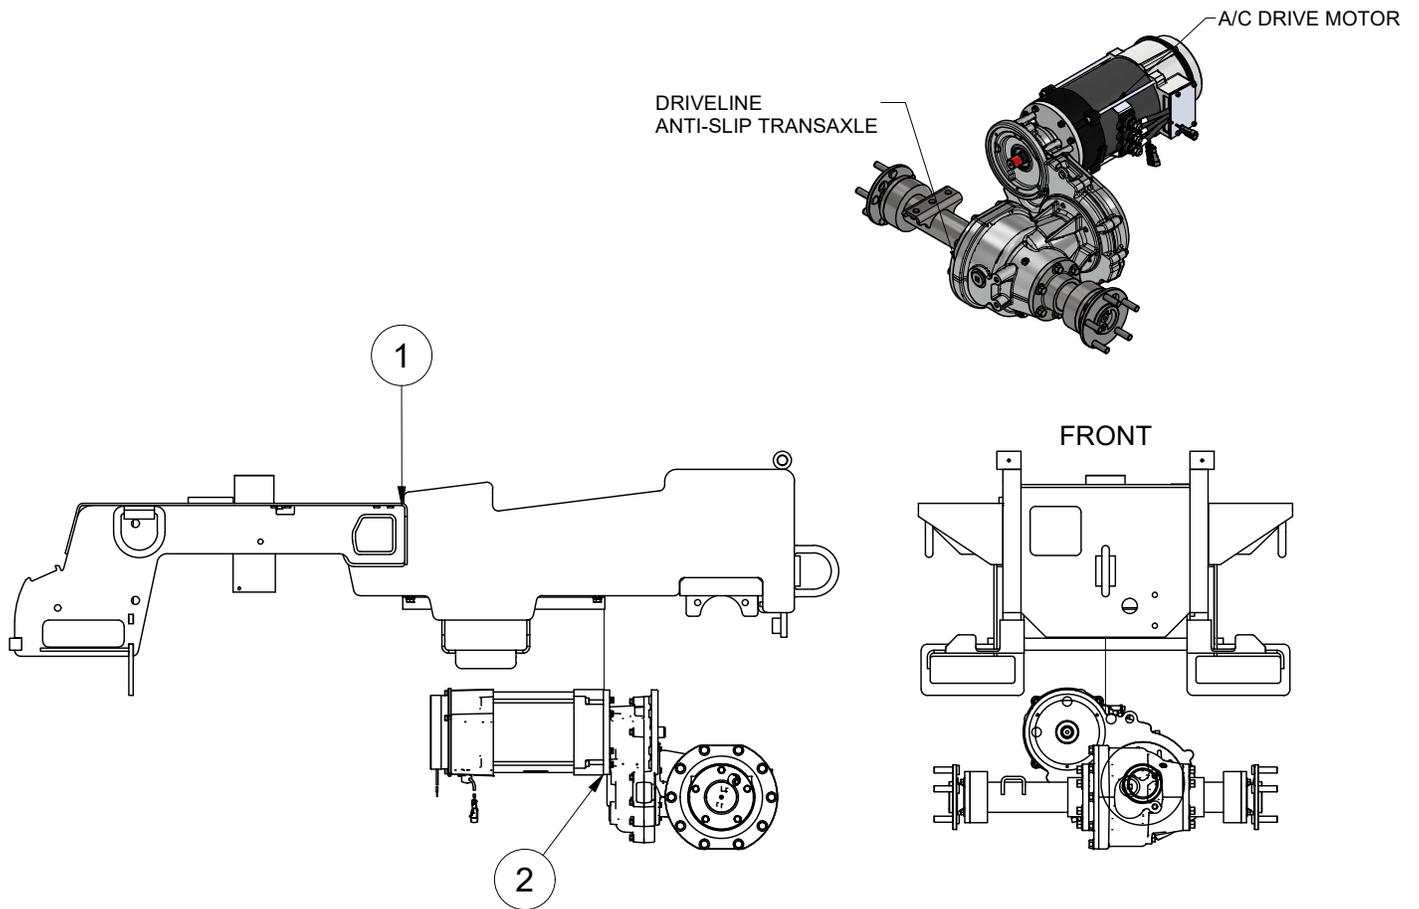


ITEM	PART #	DESCRIPTION	QTY
1	073020	WELDMENT, CHASSIS	1
2	073036	ASSEMBLY, TRANSAXLE AND MOTOR	1

PAGE LEFT BLANK INTENTIONALLY


**SECTION 1
PARTS**

Battery Slide Assembly

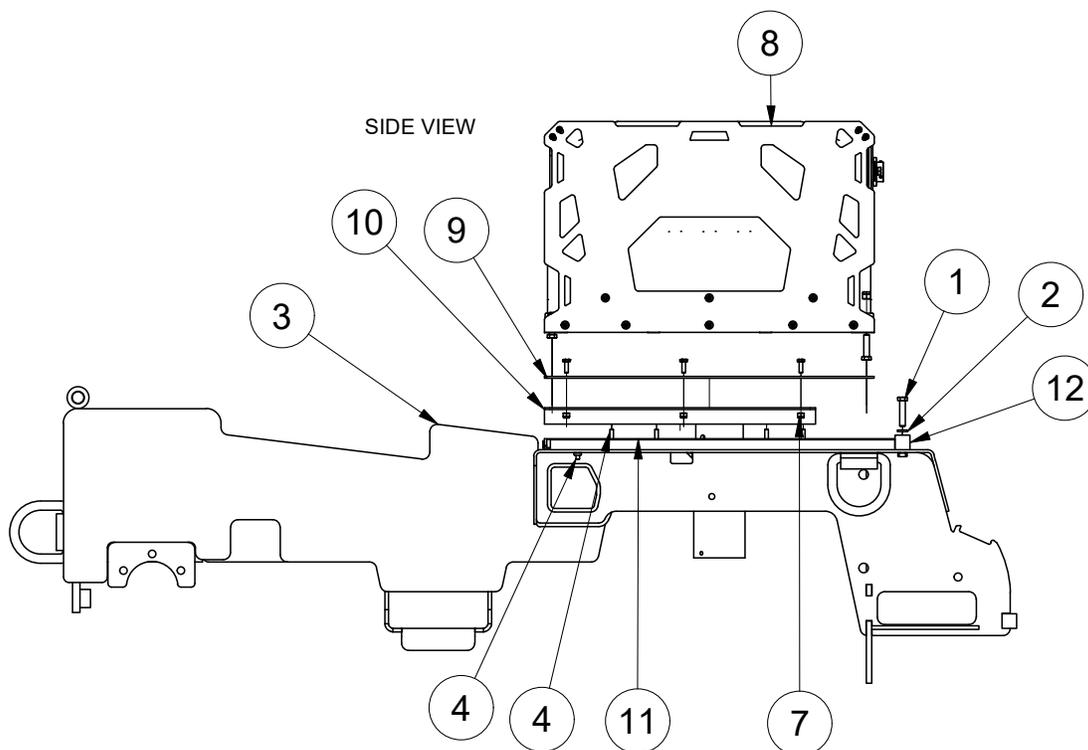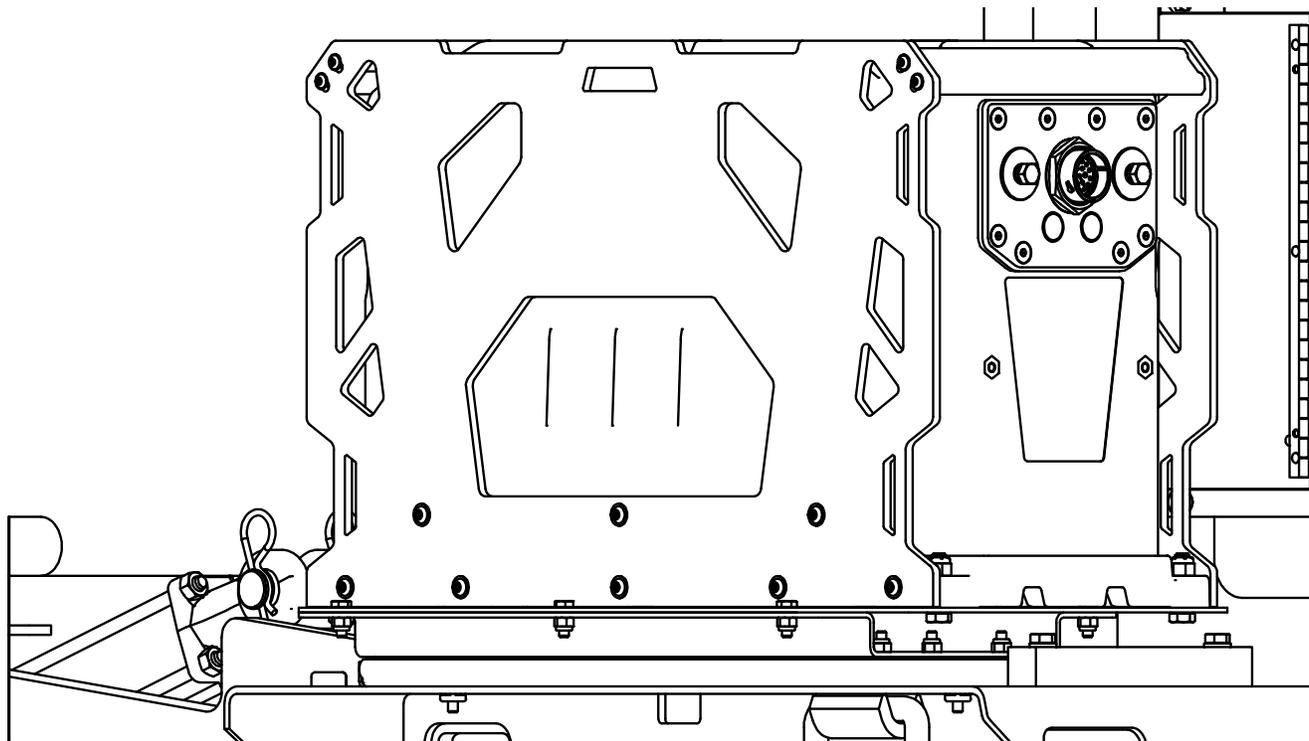

Battery Slide Assembly and Parts List




SECTION 1 PARTS

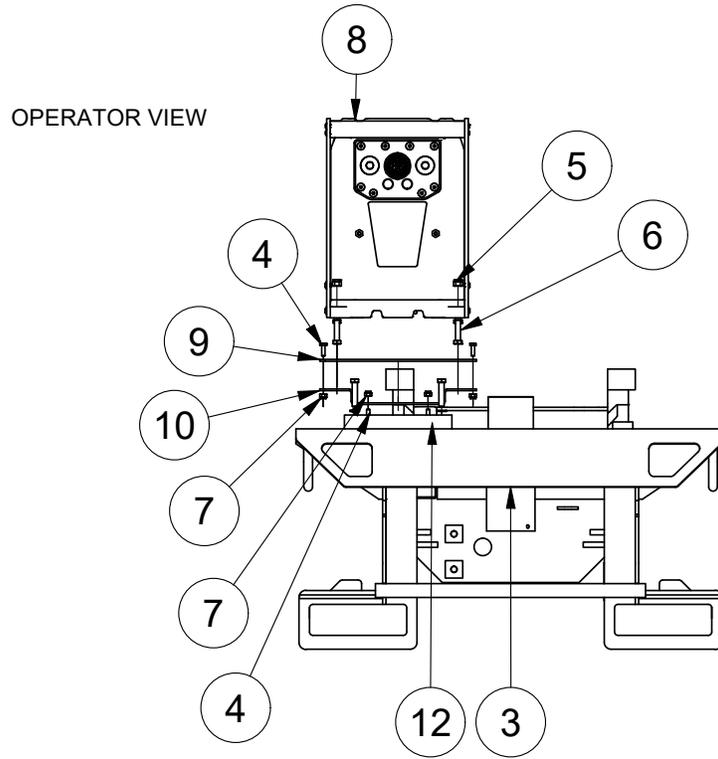

ITEM	PART #	DESCRIPTION	QTY
1	010039	FASTENER, HHCS 3/8"-16 X 3/4" LONG GRADE 8	2
2	010091	FASTENER, LOCK WASHER 3/8"	2
3	073020	WELDMENT, CHASSIS	1
4	010002	FASTENER, HHCS 1/4"-20 X 3/4"	20
5	010464	FASTENER, NUT NYLOCK 3/8"-16 GRADE 8	4
6	028402	FASTENER, HHCS 3/8"-16 X 1-1/2" GRADE 8	4
7	029671	FASTENER, HEX NUT 1/4"-20 NYLOCK	14
8	073038	BATTERY	1
9	073097	PLATE, BATTERY TRAY MOUNT	1
10	073098	PLATE, BATTERY SLIDE MOUNT	1
11	073100	BATTERY SLIDE MOUNT	2
12	073103	BAR, BATTERY TRAY LOCK	1

SECTION 1 PARTS

Handle Bar & Throttle

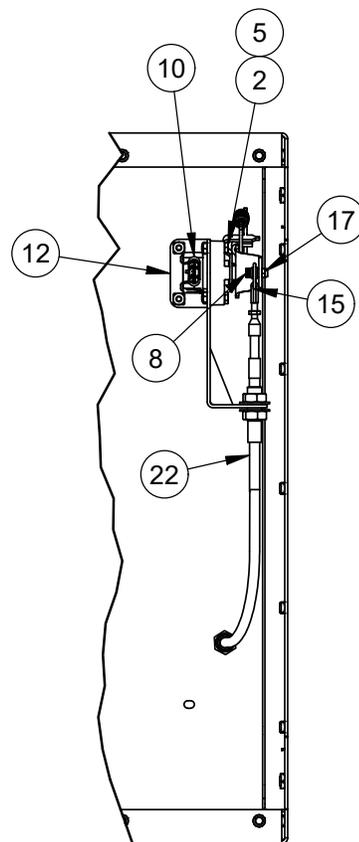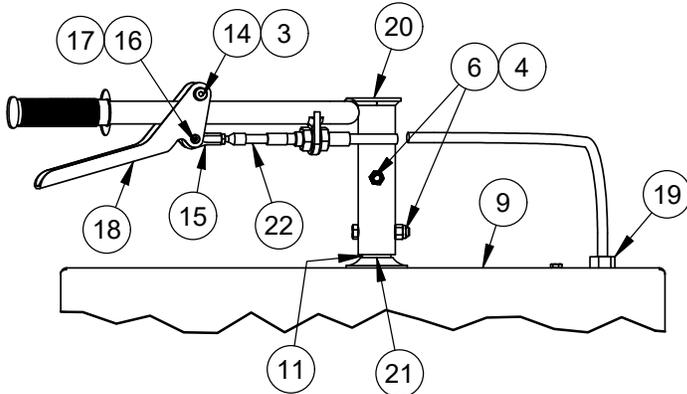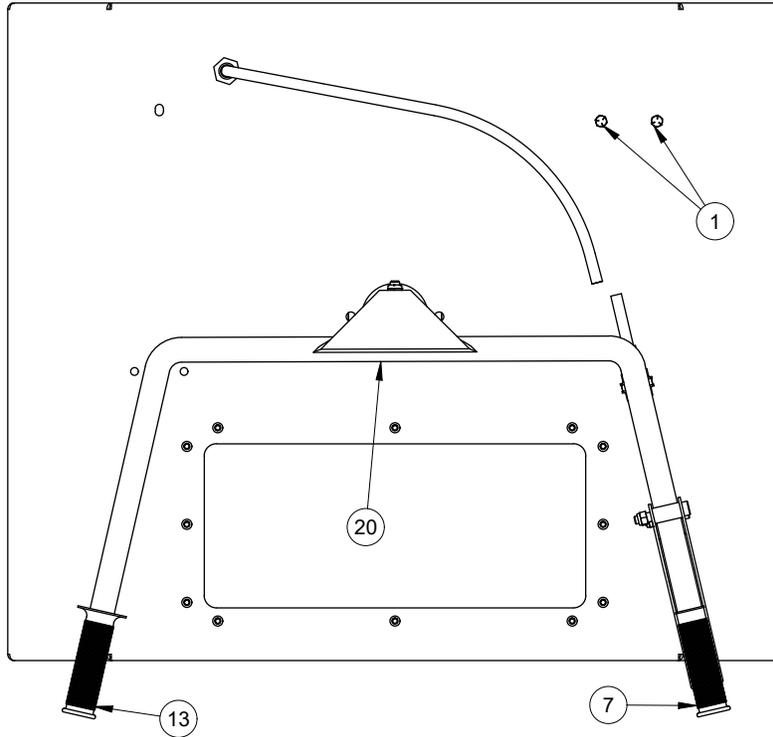

UNDERSIDE


Handle Bar & Throttle Parts List

SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	010001	FASTENER, HHCS 1/4-20 X 1/2	2
2	010003	FASTENER, HHCS 1/4-20 X 1	4
3	010109	FASTENER, HEX NUT NYLOCK 5/16-18	1
4	010464	FASTENER, HEX NUT NYLOK 3/8-16	2
5	020542	FASTENER, HEX NUT STOVER LOCK 1/4-20	4
6	040637	FASTENER, HHCS 3/8-16 X 2-1/4	2
7	048354	GRIP, SAT 3 Ø1 BLACK HANDLE	1
8	070582	FASTENER, SHOULDER BOLT 1/4 DIA. X 3/8" LONG STAINLESS STEEL	1
9	073002	(REFERENCE) CABINET, F/ BAW16E BUGGY	1
10	073026	THROTTLE CONTROL SENSOR	1
11	073040	STEERING COLUMN F/ BAW16PB-F	1
12	073110	BRACKET, THROTTLE CABLE WELDMENT	1
13	42102-07	GRIP, SAT 3 Ø1 BLACK HANDLE	1
14	42107-04A	FASTENER, SHLDR BOLT 3/8 X 1-1/2	1
15	42107-23	ROD END, TIE ROD F/SPEED CONTROL	2
16	42107-24A	FASTENER, SHOULDER BOLT, 1/4" X 1-1/4"	1
17	42107-24B	FASTENER, HEX NUT NYLOCK 10-24	2
18	42107-25	SPEED CONTROL LEVER	1
19	42107-30	GRIP, METAL, CORD, 0.375" - 0.450" O.D.	1
20	42126-01	WELDMENT, HANDLE BAR	1
21	42126-09	WASHER, RUBBER	1
22	CT0900A	CABLE, SHIFT/THROTTLE X 54" LONG	2

SECTION 1
PARTS

Steering Column Assembly

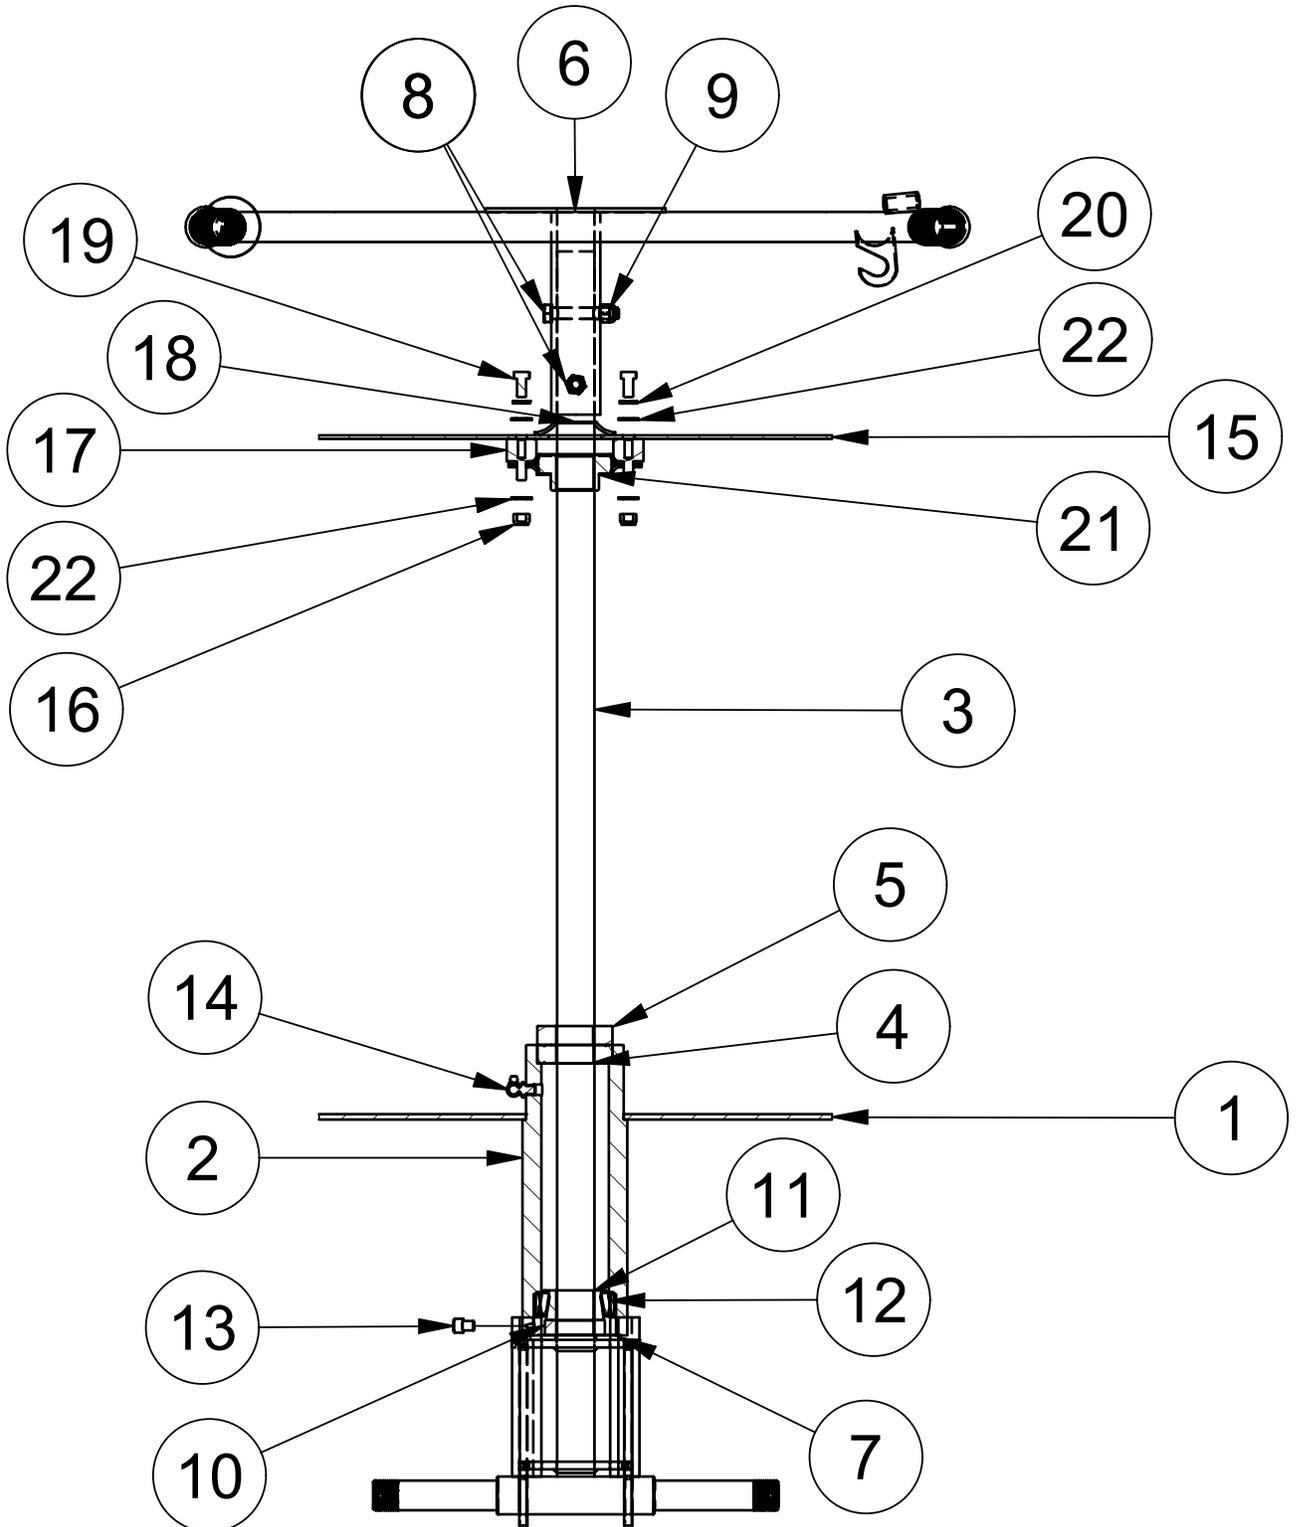

Steering Column Assembly Parts List


SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	-	REF. BUGGY CHASSIS	-
2	42100-18	ASSEMBLY, TUBE AND BEARING RACE	1
3	073040	WELDMENT, STEERING COLUMN	1
4	BE1400	BALL BEARING	1
5	C00100	CLAMPING COLLAR	1
6	42126-01	HANDLE BAR	1
7	32100-16	FASTENER, FLAT WASHER 1-1/4" ID 3" OD	1
8	040637	FASTENER, HHCS 3/8"-16 X 2-1/4" GRADE 8	2
9	010464	FASTENER, NUT NYLOCK 3/8"-16 GRADE 8	2
10	32100-15	SPACER	1
11	BE1200	BEARING CONE	1
12	BE1300	BEARING CUP	1
13	42100-17	FASTENER, SHCS 5/16"-18 X 3/8" (STOP BOLT)	2
14	015681	FITTING, GREASE 90°	1
15	-	REF. BUGGY CABINET	-
16	012612	FASTENER, NUT HEX NYLOCK 5/16"-18	2
17	32100-21	STUD MOUNTED RUBBER ISOLATOR	2
18	42126-09	RUBBER WASHER	1
19	010052	FASTENER, HHCS 5/16"-18 X 5/8"	2
20	010090	FASTENER LOCK WASHER 5/16" GRADE 8	2
21	32100-08	FLANGED BEARING	1
22	010082	FASTENER, FLAT WASHER 5/16" GRADE 8	4

SECTION 1 PARTS

Wheel Assemblies


DRIVE / FRONT WHEEL ASSEMBLY

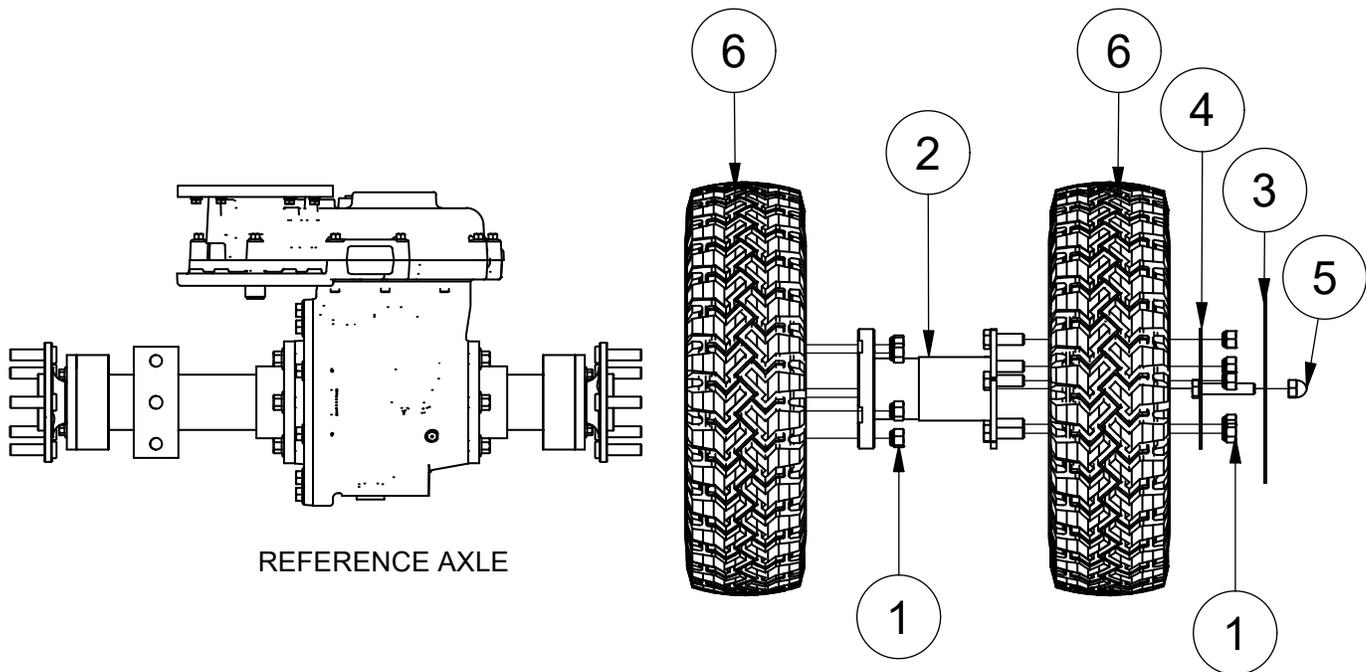

DRIVE / FRONT WHEEL ASSEMBLY			
ITEM	PART #	DESCRIPTION	QTY
1	42113-09	CONE LUG NUT B11/16/21	20
2	073072	5-LUG WHEEL SPACER	2
3	073083	OUTER WHEEL COVER	2
4	073084	WELDMENT, DRIVE WHEEL	2
5	073085	FASTENER, CAP NUT 1/2"-13 GRADE 8	2
6	073131	FOAM FILLED WHEEL	4

***NOTE:** Part quantities referenced in this table represent quantity needed **PER MACHINE.**

STEERING / REAR WHEEL ASSEMBLY

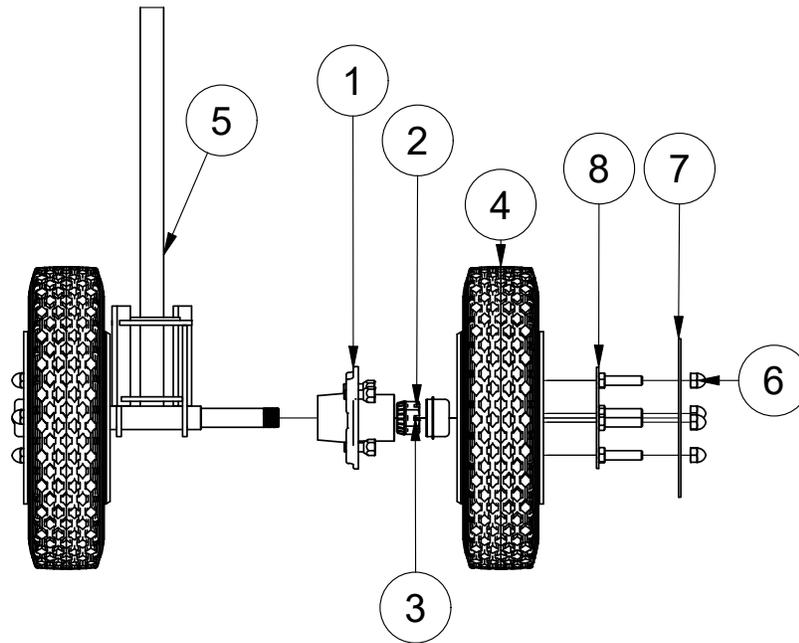


STEERING / REAR WHEEL ASSEMBLY			
ITEM	PART #	DESCRIPTION	QTY
1	42113-03	HUB WITH 4 STUDS, 2 BEARINGS, SEAL AND CAP	2
2	42113-04	CASTLE STEERING NUT 1-1/4" NF X 9/16"	2
3	42113-05	COTTER PIN 1/8" X 1-1/2"	2
4	074589	FOAM FILLED WHEEL	2
5	073040	WELDMENT, STEERING COLUMN	1
6	073085	FASTENER, CAP NUT 1/2"-13 GRADE 8	8
7	073089	HUB CAP	2
8	073090	WELDMENT, INNER HUB CAP	2

***NOTE:** Part quantities referenced in this table represent quantity needed **PER MACHINE.**

SECTION 1 PARTS

Hydraulic System

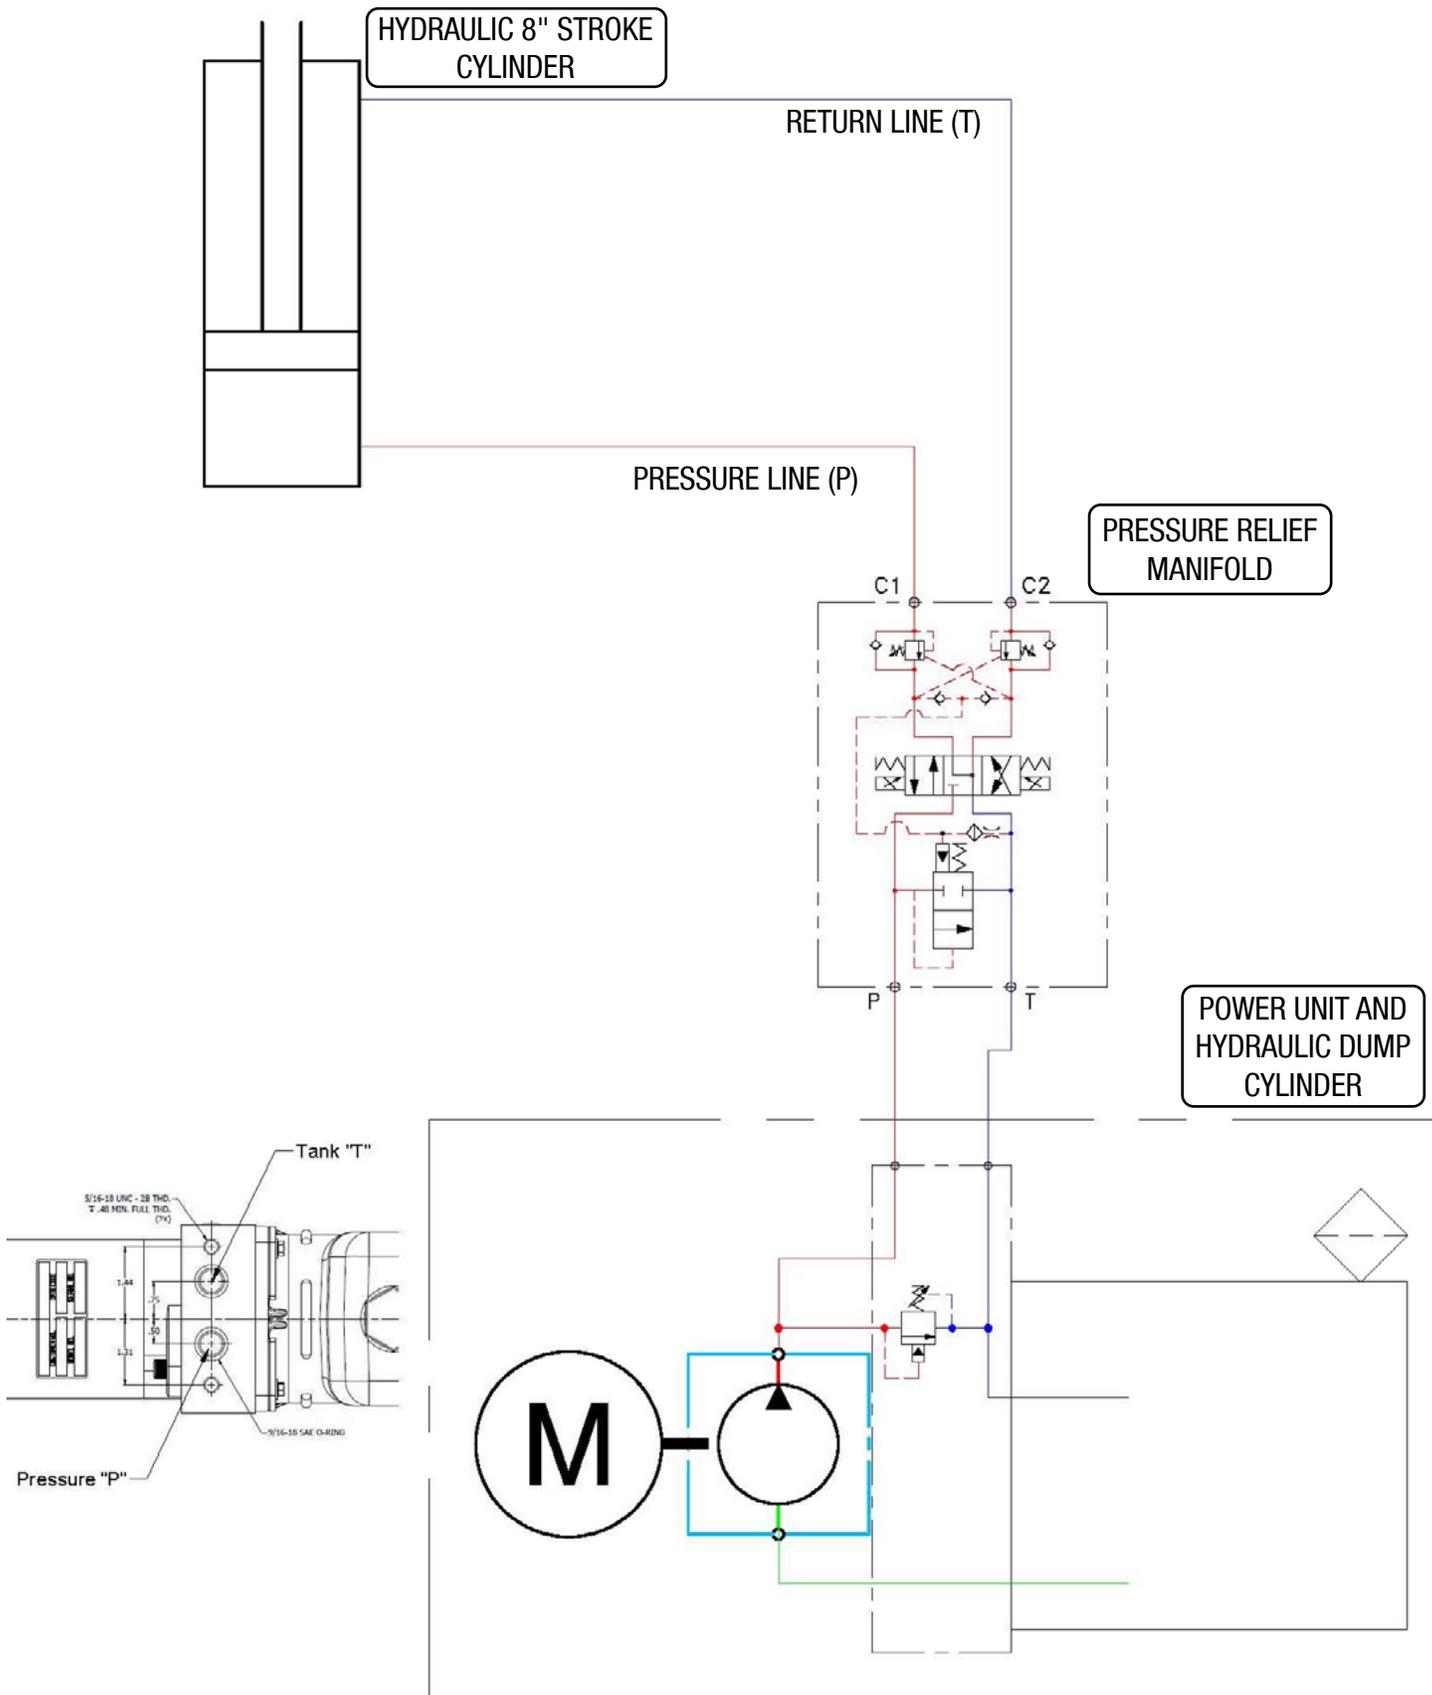

Hydraulics System Parts List

SECTION 1 PARTS

PART #	DESCRIPTION	QTY
073055	CYLINDER, 8" STROKE 2" BORE	1
073044	BLOCK MANIFOLD	1
073107	POWER UNIT, HYDRAULIC DUMP CYLINDER	1
075957	KIT, HYD HOSE/FITTING FOR AW16-B	1




The electric schematic for the AW16-B is available on the Allen Engineering website under AW16-B [equipment manuals](#).

Section 2 Decals

PAGE LEFT BLANK INTENTIONALLY

**SECTION 2
DECALS**

**Decals, AW16-B
(Kit #: 073000D)**

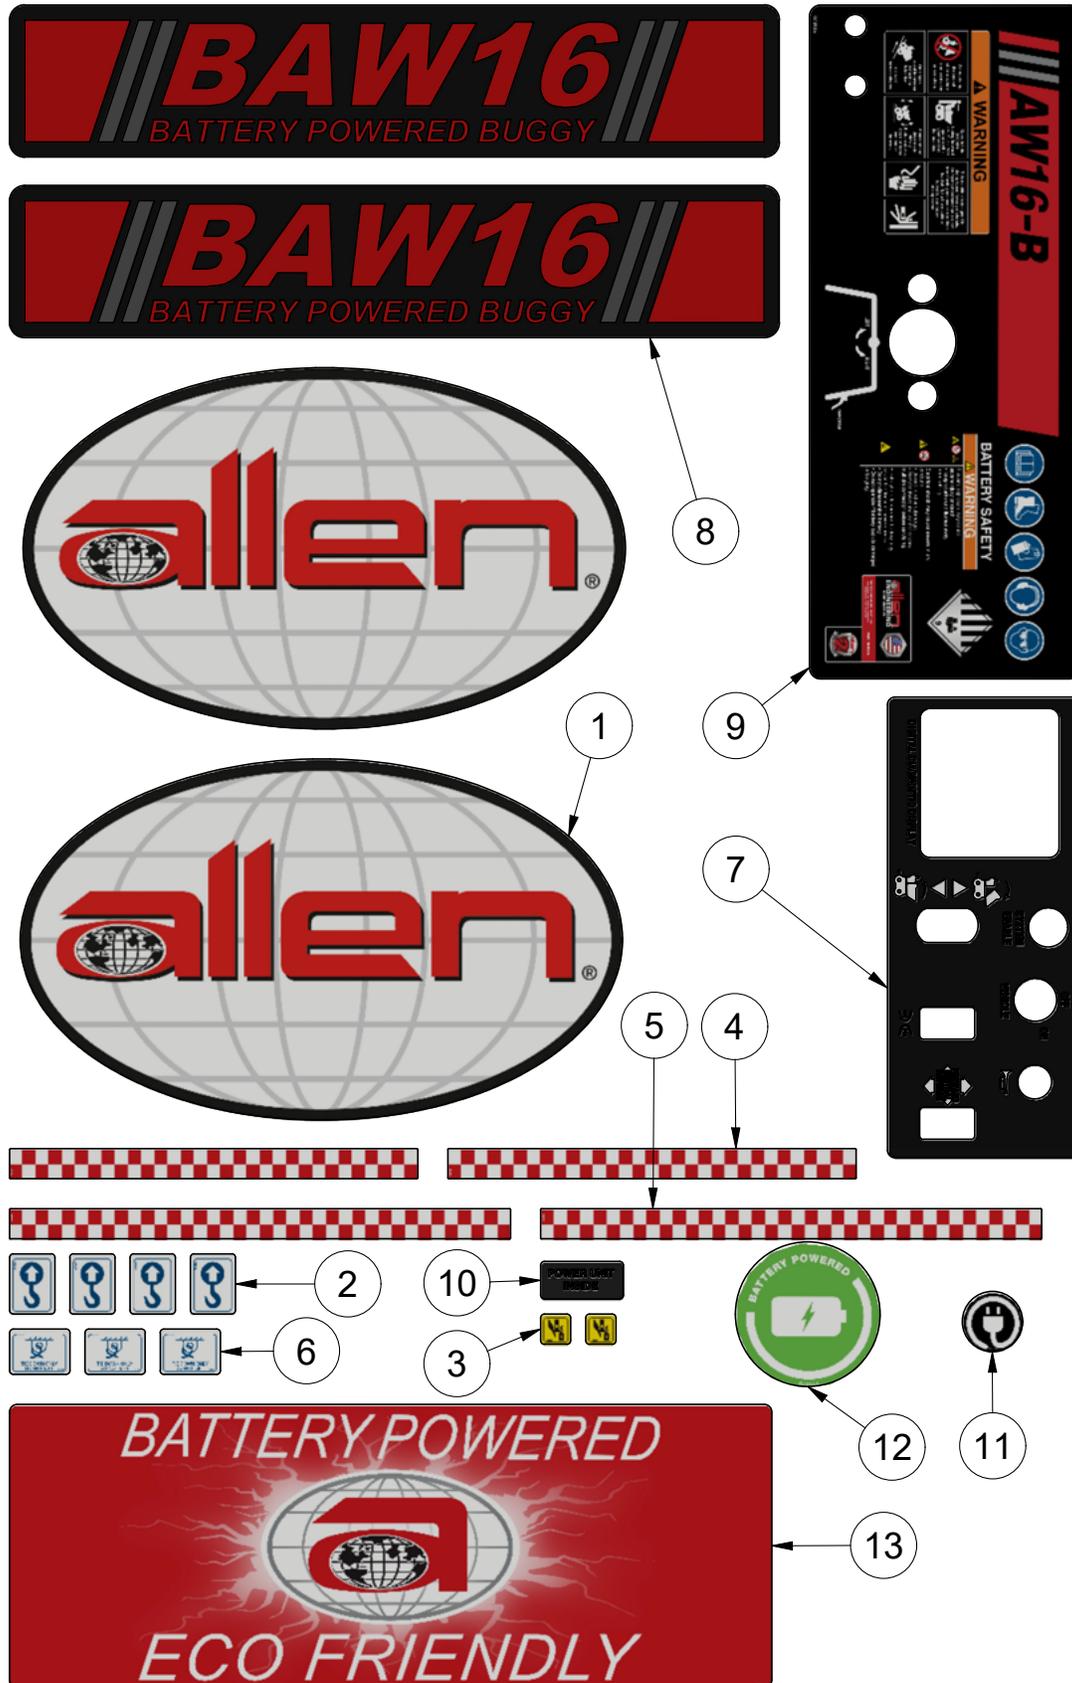

**Decal Parts List, AW16-B
(Kit #: 073000D)**

**SECTION 2
DECALS**

ITEM	PART #	DESCRIPTION	QTY
1	056400	20" OVAL ALLEN	2
2	065653	LIFT HOOK	4
3	065917	PINCH POINT	2
4	066489	CHECKER (13.55" X 1")	2
5	066490	CHECKER (16.625" X 1")	2
6	068459	TIE DOWN	3
7	073023	CONTROL PANEL	1
8	073091	SIDE AW16-B PANEL	2
9	073125	TOP AW16-B PANEL	1
10	073126	POWER UNIT, ACCESS POINT	1
11	073127	CHARGE PORT AW16-B	1
12	073534	BATTERY POWERED	1
13	074116C	BATTERY POWERED SIDE PANEL	1

Revision Detail

MANUAL REVISION DETAIL

REVISION #	REVISION DATE	REVISION REFERENCE #	REVISION BY
-	09/21	Initial Release	MK
A	05/2022	Updated Rear Wheel Part Number, ECR 21-115	MK
B	03/2026	Updated Battery Slide & Handle Bar Illustrations	MK

Copyright © 2021 Allen Engineering Corporation
All rights reserved

All information, specifications, and illustrations in this manual are subject to change without notice and are based on the latest information at the time of publication. No part of this manual may be reproduced or transmitted in any form or by any means, electronics or mechanical, for any purpose, without the express written permission of Allen Engineering Corporation (AEC). AEC assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual.

Allen Products are covered under one or more of the following patent numbers:
10,384,704
With other Patents Pending.

Printed in U.S.A.

PAGE LEFT BLANK INTENTIONALLY



AEC FACTORY & HEADQUARTERS

819 S. 5TH STREET
PARAGOULD, ARKANSAS 72450
870.236.7751
800.643.0095 (TOLL FREE (USA ONLY))

MAILING

PO BOX 819
PARAGOULD, ARKANSAS 72451

ALLENENG.COM

CONNECT WITH US ON SOCIAL

